


Installation Schema of Brackets

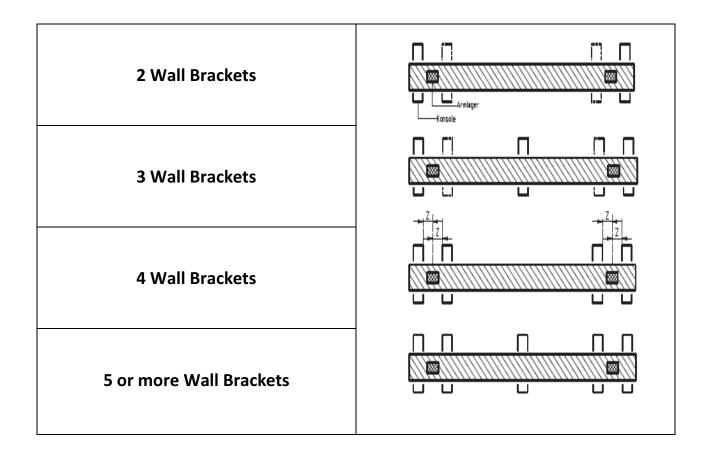

Positioning of Wall Brackets:

Wall brackets shall be installed close to the arm bracket of the retractable awning. Ideal, they should be within 4-6 inches of the arm bracket. Make sure that the distance between the arm brackets and the wall brackets "Z" is even.

If you have three or five wall brackets, then one wall bracket will be installed on center (this bracket will only take minimal forces and its main purpose is to provide additional stability).